


CP AA

Corner bead with Adjustment angle

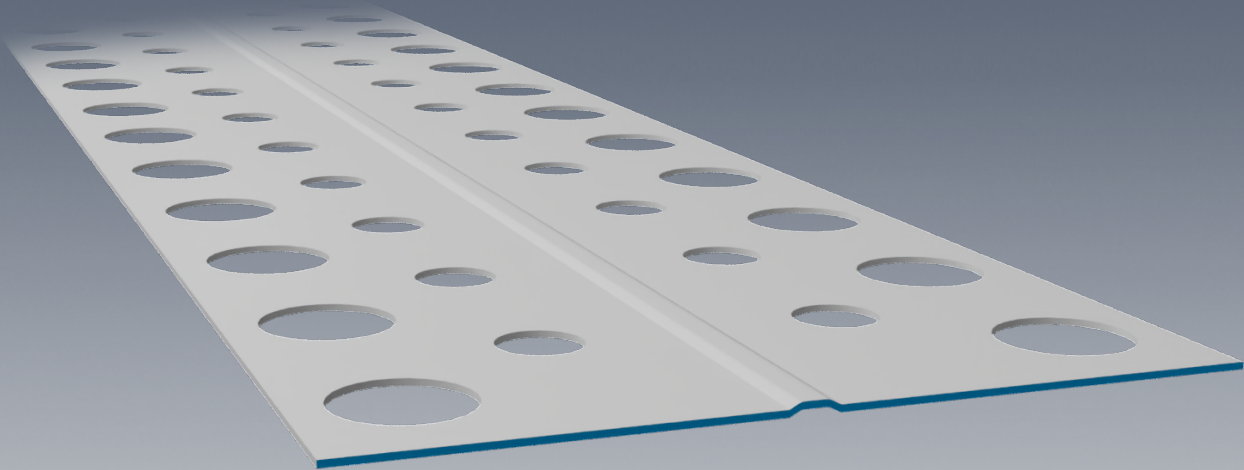

NiP Spasic


Corner bead with Adjustment angle

Length 2m / 2,5m / 3m

This profile adapts to the edges of different angles, allowing easy formation of precise edges that are resistant to mechanical damage. It is used for processing all edges, that have non-right angle, of the interior plaster system where the PVC corner bead with a right angle (90°) can not be used.



Hard PVC

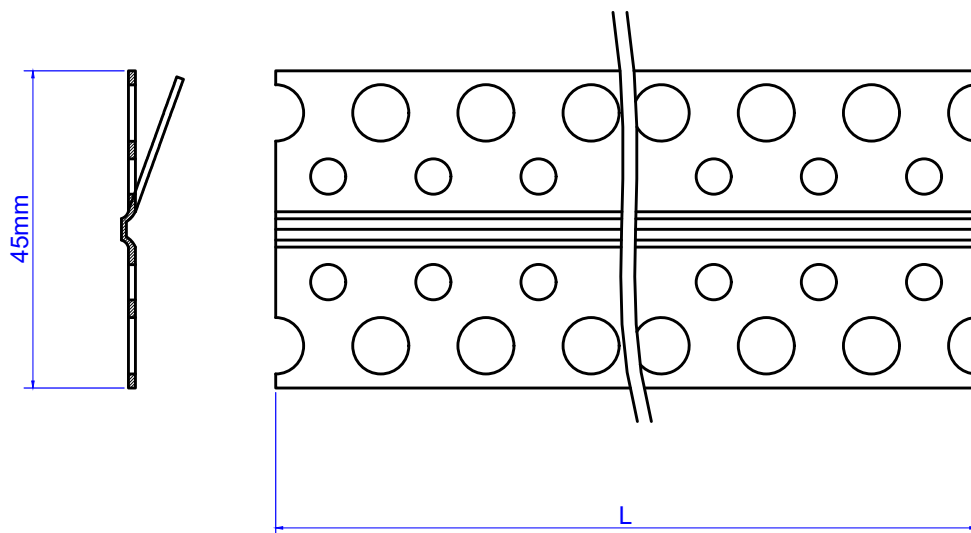

Technical drawing



1

Apply Adhesive

Trowel a layer of skim coating adhesive along the corner of the plasterboard.

2

Embed the Corner Bead

Press the corner bead firmly into the fresh adhesive, ensuring it is plumb and perfectly straight.

3

Finish the Surface

Trowel a final, thin layer of base coat, feathering the edges to create a smooth, seamless transition with the main wall surface.



Application must be carried out in ambient temperatures between +5°C and +35°C*.



Installation is to be performed by qualified and trained professionals only.



Store at dry place, not directly on Sun.