


CONNECTORS



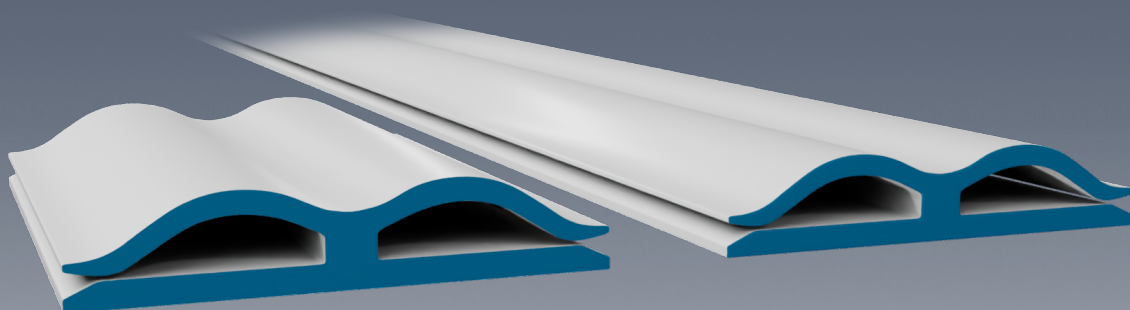


NiP Spasic

Connectors


Length 30mm / 1000mm

Joining base profiles used in ETICS. It ensures a flush joint and prevents unevenness when connecting one base profile to another.

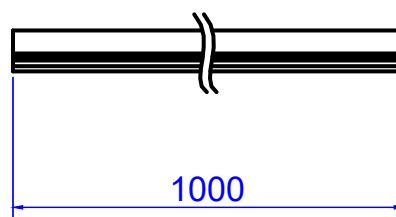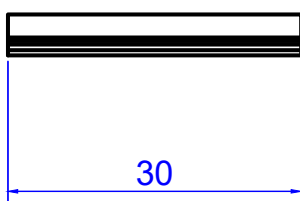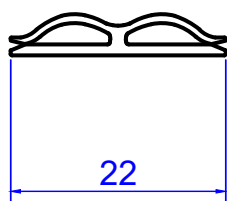

Technical drawing

Application

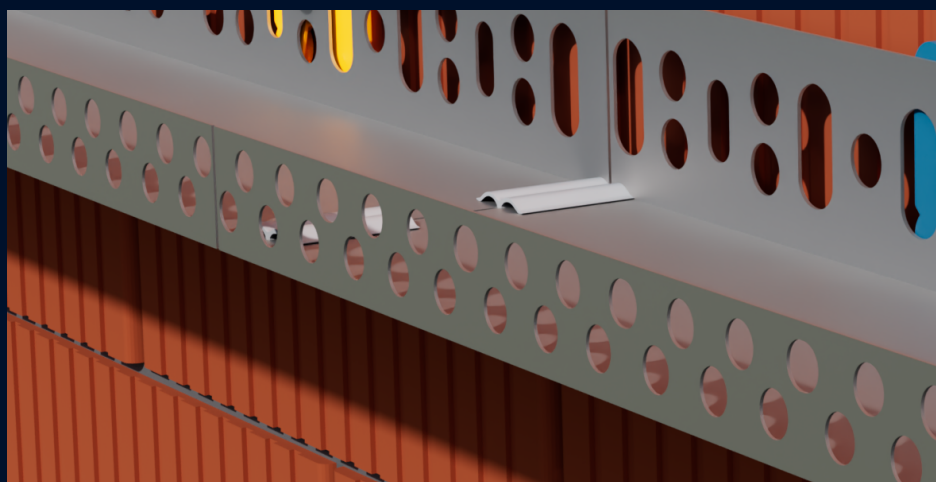

ACCESSORIES

Spacers, Connectors, Pads, Levelers



NiP Spasic

1

Onto the previously leveled and fastened first base profile in the ETICS, slide a connector onto both horizontal ends so that the flat side of the connector faces downwards.

2

Insert each subsequent base profile into the free end of the connector, then level and fasten it in alignment with the previous profile.

We invite you to reach out to our team to discuss our custom packaging solutions.

Packaging for Connectors

30mm	1000mm
Bag: 100pcs / Box: 50 bags	Bag: 10pcs / Box: 250pcs



Application must be carried out in ambient temperatures between +5°C and +35°C*.



Installation is to be performed by qualified and trained professionals only.



Store at dry place, not directly on Sun.